



Technical information

- ▶ Sensys
- ▶ Installation notes


Installation

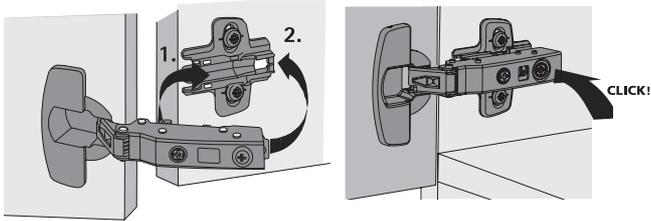


Removal

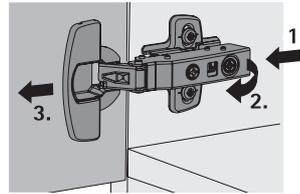


Overlay adjustment

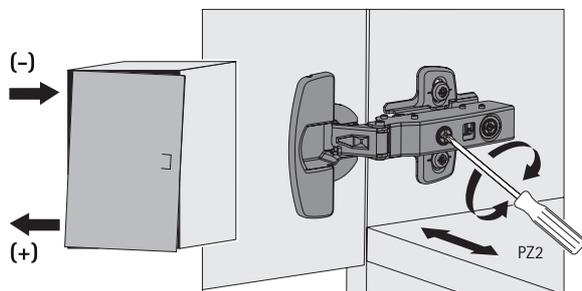


Depth adjustment

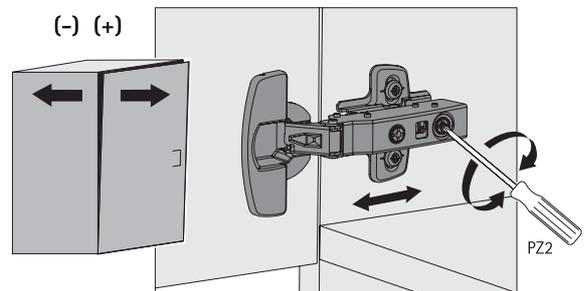

Oblong hole height adjustment

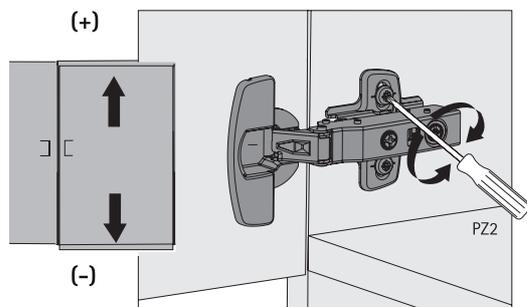

Eccentric cam height adjustment

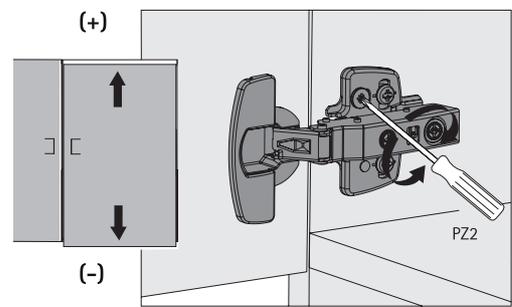

Cup installation for screwing on

